



**CONGRATULATIONS ON YOUR PURCHASE  
OF THE SKAB QLR PLIERS.**

**WWW.SKABTOOLZ.COM**

THESE PLIERS WERE DESIGNED SPECIFICALLY TO FACILITATE THE REMOVAL  
OF THE FOLLOWING CHAIN MASTER LINKS:


SRAM POWER LINK G. S. & 9 SPD (COVERS ALL 8 & 9 SPD LINKS)

KMC MISSING LINK CL366, CL371, CL373, CL562, CL566, CL571, CL573 (8, 9, & 10 SPD LINKS)

PLEASE READ THE FOLLOWING INSTRUCTIONS TO ENSURE THE PROPER USE OF YOUR QLR-0 OR QLR-1 PLIERS.


## STEP ONE

LOCATE MASTER LINK AND INSERT  
QLR PLIERS AROUND THIS LINK

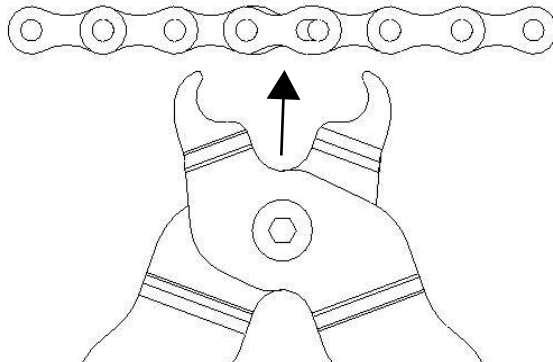

## STEP TWO

WITH FREE HAND, USE FINGERS TO  
APPLY PRESSURE TO BOTH SIDES  
OF THE MASTER LINK. THIS SIDE  
PRESSURE IS REQUIRED TO UNLOCK  
THE MASTER LINK AND MUST BE  
APPLIED BEFORE SQUEEZING THE  
QLR PLIERS.

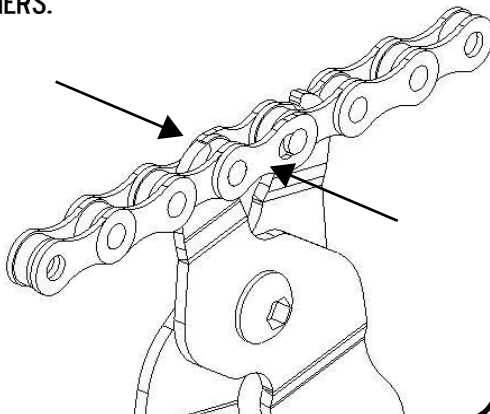

## STEP THREE

WHILE MAINTAINING SIDE PRESSURE,  
SQUEEZE QLR PLIERS TOGETHER TO  
REMOVE THE MASTER LINK.

